

Trigger pull weights are approximate and can vary based on factory tolerances. Our measurements were taken with a "Trigger Scan" machine which pulls the trigger mid line between the Safety Pivot Pin and trigger quard. Your results with a manual trigger pull gauge will likely vary(lower than our readings) if you pull the trigger at the lowest point possible.